


Harmony Blind Fitting Instructions


First decide if you wish to fit the blind using the face fix or top fix method. Before fitting the brackets, offer the brackets up to the surface and mark the hole spaces using a pencil. Please note that you may need to allow extra space to avoid any protrusions such as window handles.

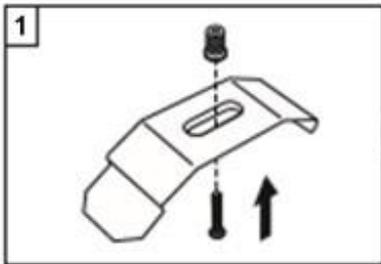

Top Fixing

Simply use the holes in the top of the bracket to screw directly up into the lintel/ceiling around 1.5cm away from your window (1)


This is so the cord and back material runs smoothly away from your window - if you have handles that stick out further, then fit further away from the window to avoid it catching.

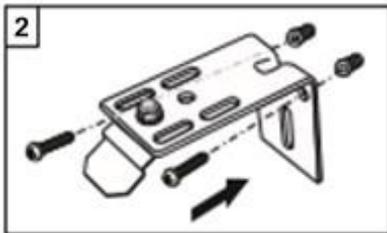

Face Fixing


When fixing using the Face fixing method use the holes at the back of the "L" shaped bracket (2). You may need to fit a wooden block/spacer to keep the blind away from the handles on your window.

Remember to fit the bracket clip, using the small screw, to the front of the "L" shaped bracket (2) so that the headrail can be clipped in.

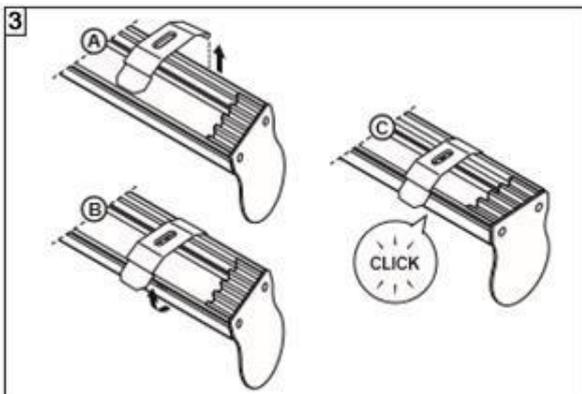

Fitting the Headrail (Top Fit and Face Fit)

Then simply tilt and hook the headrail into the back of the bracket clip and push the headrail into position until it firmly clicks in place (3)

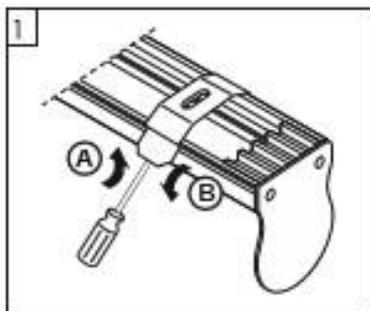

Taking the Blind Down

To take the blind down simply push a screwdriver up between the headrail and the front of the bracket clip and gently ease the headrail away from the bracket.


SAFETY DEVICE

WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product. Always use a safety device to keep cords or chains out of reach of children.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

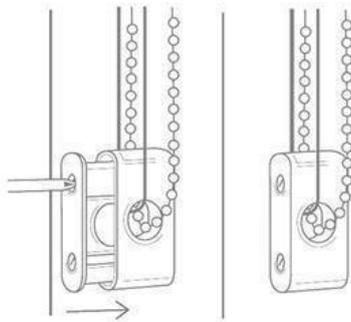


SAFETY DEVICE

The safety device must be installed at the maximum distance possible from the control mechanism to prevent looped chain becoming slack.

Place the safety device on the wall and mark the positioning of the 2 screw holes.

Drill holes using a suitable drill bit.

Place device into position ensuring the chain is fully taut.

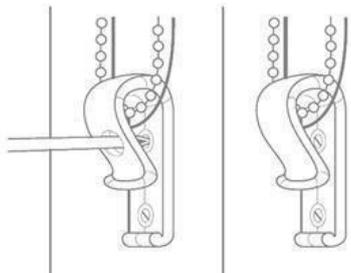

RETAINING DEVICE

Screw the retaining device using suitable fixings ensuring the device is fully closed.

(If your blind is supplied with our child safe draw rod control option, there is no requirement to fit an additional child safety device)