


Wooden Blind Fitting Instructions

Step 1

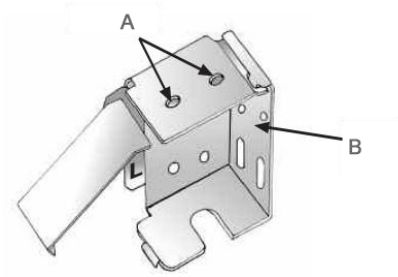

FIXING THE BRACKETS

Extend hinged door on each bracket as far as it will go. Identify left and right brackets from light Land R markings inside. Position the bracket and mark two holes according to type of fixing chosen (A – Top Fix, B – Face Fix)

Step 2




FITTING THE BLIND

Once the brackets are fitted, remove plastic end caps from blind headrail. Slide the blind into the brackets, with velcro patches facing towards you.



Push down and snap shut the hinge doors to lock the headrail into position.

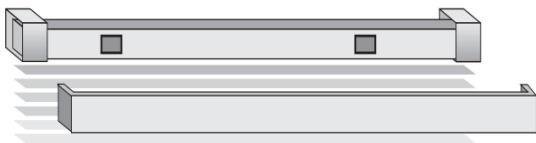

Remove the thin plastic backing from both velcro patches, leaving adhesive surfaces. Position fascia on front and press firmly to adhere. If supplied, wooden returns will fit automatically into place at ends of headrail.

WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.


SAFETY DEVICE

Children can be strangled if a safety device is not installed. Always use a safety device to keep cords or chains out of reach of children.



The safety device must be installed at the maximum distance possible from the control mechanism and at least 1.5m from the floor.

Place the safety device on the wall and mark the positioning of the 2 screw holes.

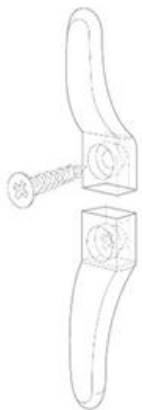

Wrap the cords around the cleats as shown

When the cords are fully accumulated ensure they are secure so when any cord is pulled ne excess cord is released

