

247blinds

VENETIAN BLIND

FITTING GUIDE

 
🕒 Fitting Time: Approx. 15 Min

⚠️ **WARNING:** PLEASE READ THE INSTRUCTIONS BEFORE OPERATING THIS PRODUCT




WHAT YOU'LL NEED


Screwdriver



Drill

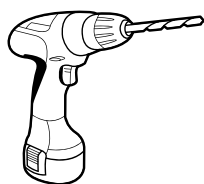 

Measuring tape

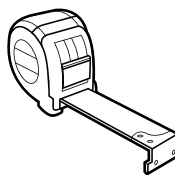 


Pencil




WHAT'S IN THE BOX

 The blind

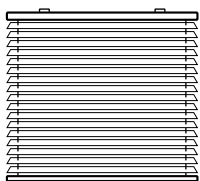

Swivel brackets

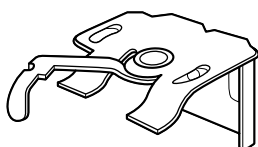 


STEP 1 - FITTING THE BRACKETS

Unpack your Venetian blind and check that everything is present. Now you need to fit the blind.


Venetian blinds come with a set of swivel brackets. The larger the blind gets, the more of these you may have. Decide how you want to fit; you can choose from top-fixing or face-fixing.

 TOP FIX BRACKET

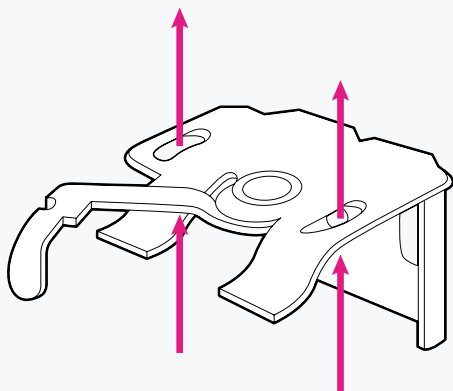

Top fix means to install the screws bottom-up through the top of the brackets, this method is used for attaching to the ceiling or top of the window recess.

 FACE FIX BRACKET

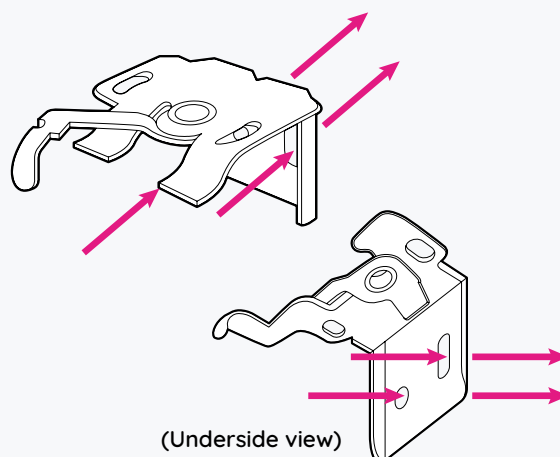


Face fixing means to fit through the back side of the brackets, directly onto a vertical surface, such as a wall.

Install the brackets starting from 110mm from the ends of the headrail to start, then install, spacing evenly across the window, for equal support. Hold each bracket in place and mark the hole positions.

THE INSTALLATION OF THIS PRODUCT SHOULD BE CONDUCTED BY SOMEONE COMPETENT IN DIY.

A NOTE ON TOP FIXING

 The blind depth, from the back of the bracket to the front of the blind, is approx. 4cm, including the wand control. Measure and mark the distance (see image D) where you'll be fitting the brackets to, allowing for obstructions like window handles.

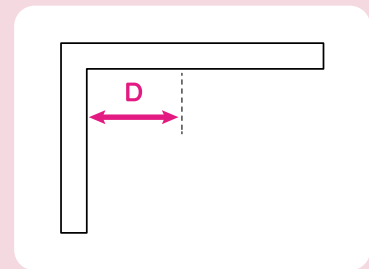


STEP 2 - FITTING THE BLIND


The swivel brackets that come with your blind will have a slight lip that slots into the top of the headrail, near the front. Use a gentle swing motion to slot your headrail into place.

You may need to angle the blind slightly. Ensure the front arm is opened counter-clockwise for the next step.


 
Once you have done this, with the brackets and headrail sitting nicely in place, swing the arm to the left, ending in a closed position. This will keep the blind locked into place. Don't be afraid to use a little bit of force if you need to with this step.

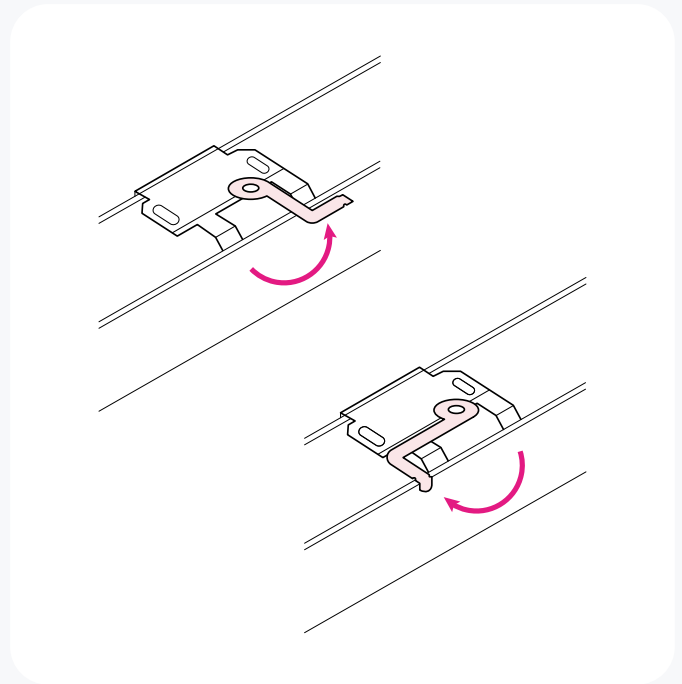

FOR VENETIAN BLINDS ONLY

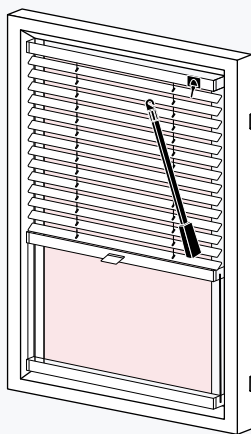 

  Attach the plastic wand by hooking the wand onto the tilt mechanism on the Venetian Blind.

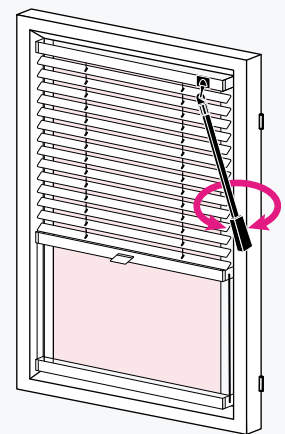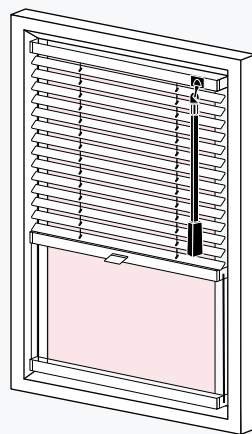

Simply twist the wand to open and close the slats.

 
 
CHILD SAFETY

The safety device must be installed at the maximum distance possible from the control mechanism, and at least 1.5 metres from the floor to prevent cords from becoming tangled or slack. This blind comes with a safety device for screwing to the wall & a cord with a breakable joint. This cord condenser is designed to break under pressure and must not be tampered with.

STEP 3 - INSTALLING THE SAFETY DEVICE

Place the safety device on the wall and mark the position of the 2 screw holes. Screw or drill the safety device securely to the wall using suitable fixings. Once secured, loop the control cord around the device in a figure of eight shape, ensuring the cord is as tight as possible.

CHILDREN CAN STRANGLE IF A SAFETY DEVICE IS NOT INSTALLED. ALWAYS USE A SAFETY DEVICE TO KEEP CORDS AND CHAINS OUT OF REACH OF CHILDREN.

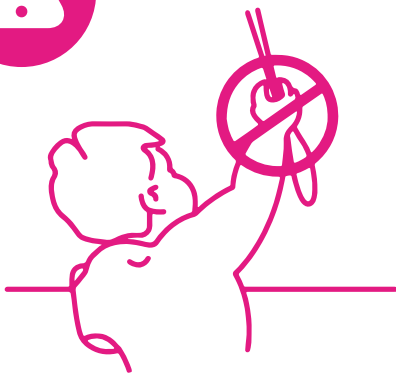

WARNING

Young children can be strangled by loops in pull cords, and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children.

Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.