


### Fitting The Blind:


#### Step 1 - Fitting the brackets

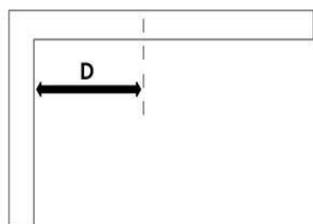

#### TOP FIXING

Measure and mark the distance (D), allowing for obstructions like handles that protrude into the recess area. Hold each bracket into place and mark the hole positions.

Fit each bracket with suitable screws. Please ensure fixings are suitable for the wall/surface to which you are mounting the brackets

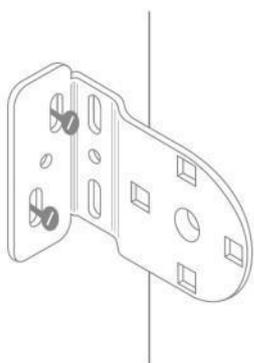


#### FACE FIXING

Hold each bracket into place and mark the hole positions.

Fit each bracket with suitable screws. Please ensure fixings are suitable for the wall/surface to which you are mounting the brackets

#### Step 2 - Fitting the blind

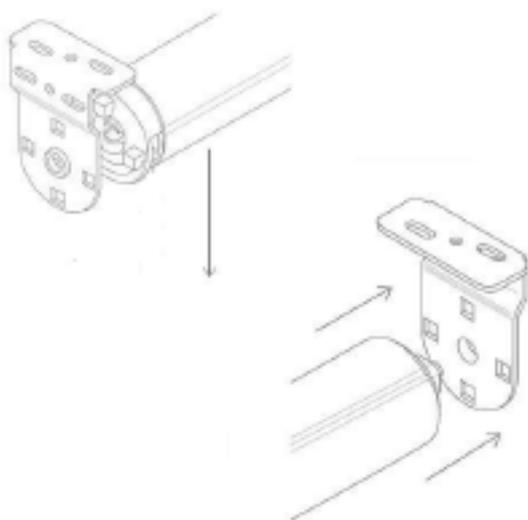

Hold the fully wound blind, insert the idle pin end into the bracket as shown.

With the idle pin end in place, insert the control end into the opposite bracket by depressing the pin end then pull down vertically until the control end clicks into place.

**Note:** The battery pack and motor for roller blinds comes pre-installed in the roller tube so you do not need to fit this or make allowances for space to fit it.

#### A Quick Note About Re-Charging Your Blind:

To re-charge your motorised blind simply connect your Somfy charger into the port in the in the end of the roller tube. Depending on the position and space around your blind, you may need to take the blind down in order for the charger to reach it.



## Activating Your Blind

# ATTENTION!

In order to protect your blind during transit, the motor has been placed in sleep mode, prior to installation please wake the motor up by following the below instruction:

Press and hold the programming button on the motor head for 1 second, the blind will jog once confirming that it is now awake.


The motor programming button will look different depending on the blind that you have opted for.

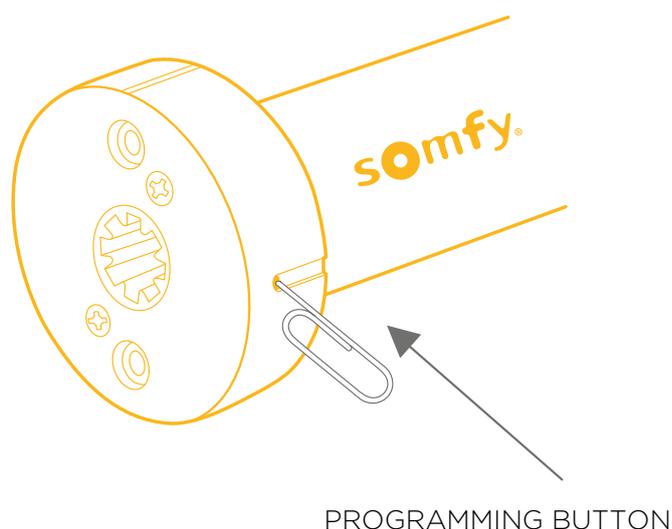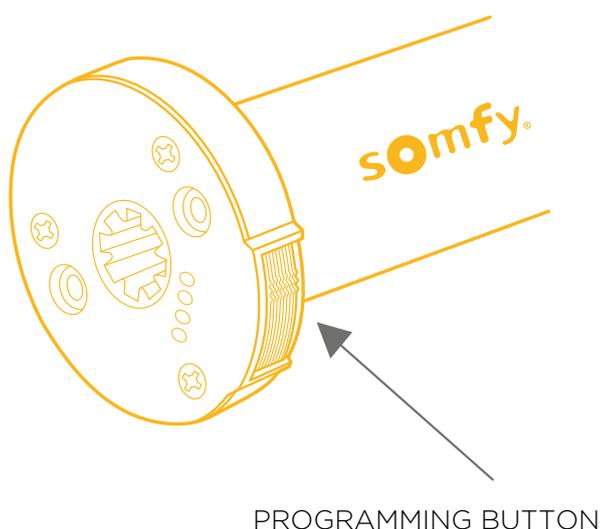

Your Motorised blind is now ready to use!

Please note that we have set the upper/lower limits in accordance with your measurements. Should you wish to change these, you can find details of this from page 4 onwards

## Operating Your Remote And Blind:

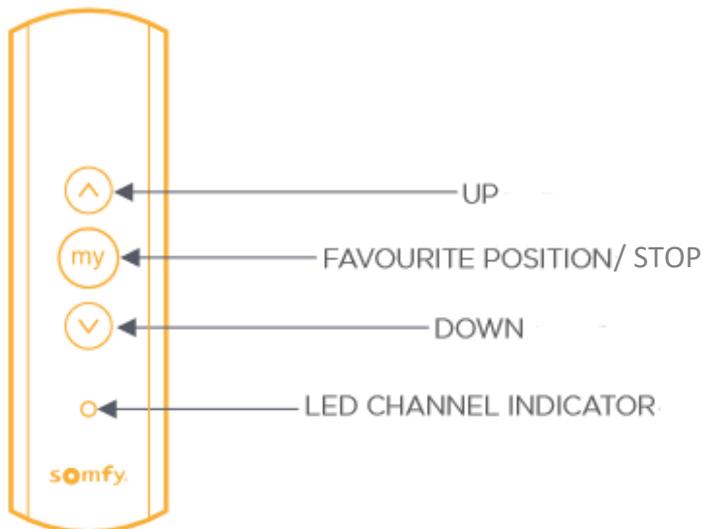

SITUO RTS

### Pairing A Remote With A Motor:

Your remote should come pre-paired with the blind that it belongs to. If not, please follow the quick and simple step below to pair it.

On the remote, press and hold the UP and DOWN buttons simultaneously until the blind jogs.\*

\*Moves up slightly then down once.

**Note:** Power should only be connected to the blind/blinds being programmed. All other blinds should be disconnected from their respective power while programming is in progress.

### Raising The Blind Up:

Press the UP button to start rolling the blind upwards.


Press the MY button when the desired position is reached to stop the blind.

When you stop your blind, the fabric will 'roll down' a notch so as to settle in a 'stopped' position.

### Lowering The Blind Down:

Press the DOWN button to start rolling the blind down.

Press the MY button when the desired position is reached to stop the blind.

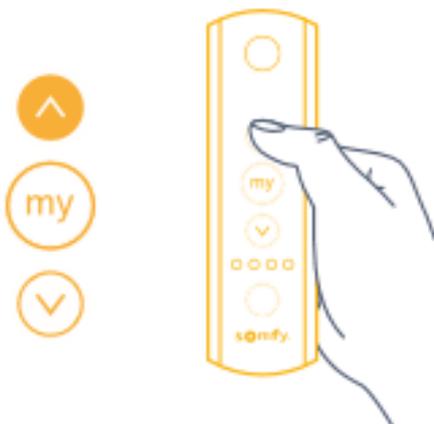


To set up your 'Favourite Position' (MY button), please see page 3.

The blind will move at the pre-programmed speed. To change the speed, see page 3.

## Further Programming:

Please note that before changing any of the pre-programmed settings, the motor needs to be put in to 'programming' mode, as below;

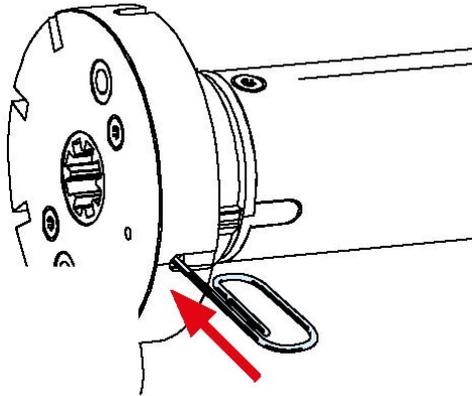

Press and hold the program button on the motor head for 15 seconds.

The blind will 'jog' (briefly moves up and down) 3 consecutive times.

The LED light on the remote will turn orange, signalling the motor is ready for programming.

## Changing your Up and Down limits:

1. Connect your remote to the motor by pressing the Up button and Down button simultaneously until the motor jogs.
2. Check the motor rotation direction by checking the Up and Down buttons move the blind correctly.
3. Change motor rotation direction if needed.
4. Move the blind to your desired Up limit.
5. Set the Up position.
6. Set the Down position.
7. Confirm your limit settings.
8. Record your settings and remote to motor memory.

Press and hold the program button on the back of the remote until the motor jogs.

IO T Q U UK U VSGOCHITT QJ VUXILK ~ I LW SP U TH I VOJ  
 XK S UK ~ SJS PPIQJ GVW QITVQH SQ UK UK ~ TIQ @KLT Q TIQ  
 G Q H II CHG N Q

H VS VSK T UK SSP UT VP Q UL UK UK ~ SJS PPIQJ  
 GVW QITVQGO QUK G NXILK VUS P VIQ UK ~ TIQ



## Further Programming:

Note: When programming the different aspects, the blind will be required to jog (moves up slightly then down once) to confirm the programmed action.

## Setting Your Favourite Position:

1. Press the UP or DOWN button until the blind is in your preferred position, then press the MY button to stop it. If necessary, adjust the desired position by pressing either the UP or DOWN button.
  2. Press and hold the MY button until the blind jogs (no more than 5 seconds). The fabric roll position has now been stored to memory as the 'favourite position'.
  3. To action your favourite position, simply press the MY button on your remote and the blind will automatically move to the set position.
  4. To set a new MY button position, simply re-follow steps 1 and 2 again.
- 

## Increasing The Roll Speed:

1. To increase the roll speed, press the MY and UP buttons until the blind jogs once.
2. There are 4 speed settings, so repeat step 1 as needed.
3. The maximum setting has been reached when the blind briefly moves 3 times in one direction then 3 times back in the other direction.

## Decreasing The Roll Speed:

1. To reduce the roll speed, press the MY and DOWN buttons until the blind jogs once.
2. There are 4 speed settings so repeat step 1 as needed.
3. The minimum setting has been reached when the blind briefly moves 3 times in one direction then 3 times back in the other direction

**Note:** The motor has 4 speed settings, each action increases or decrease the speed setting by 1. When the min or max speed has been reached, the blind will no longer respond to attempts to change this setting.

## Further Programming:

Note: When programming the different aspects, the blind will be required to jog (moves up slightly then down once) to confirm the programmed action.

## Pairing A Second Remote:

1. Using a paper clip or pen, press and hold the PROGRAM button on the back of the original remote\* until the blind jogs once.
  2. Using a paper clip or pen, press and hold the PROGRAM button on the back of the new remote\* until the blind jogs once.
- New remote is now added to the memory and can be used to operate the blind.

\*The program button on a Sítuo RTS (standard remote supplied with a motorised roller blind) is underneath the back casing which can be slid off and on.

---

## Deleting A Remote:

1. Using a paper clip or pen, press and hold the PROGRAM button on the back of the original remote\* until the blind jogs once.
2. Using a paper clip or pen, press and hold the PROGRAM button on the second remote until the blind jogs once.

Second remote is now deleted and will not operate the blind.

\*The program button on a Sítuo RTS (standard remote supplied with a motorised roller blind) is underneath the back casing which can be slid off and on.

---

## Factory Reset:

To restore the motor to factory settings:

Press and hold the PROGRAM button, located on the motor head, for approx. 12 seconds. The blind should jog 3 times to confirm this has been done.

The motor head will look different depending on the blind you have opted for:

