24.7blinds



TWIST&FIT

VERTICAL BLIND

FITTING GUIDE

Fitting Time:
Approx. **2 min**

WARNING: PLEASE READ INSTRUCTIONS THOROUGHLY BEFORE OPERATING THIS PRODUCT

THE INSTALLATION OF THIS PRODUCT SHOULD BE CONDUCTED BY SOMEONE COMPETENT IN DIY.



STEP 1 - INSTALLING THE HEADRAIL

Unpack your blind on a clean, dry surface.

NOTE: The plunge end is positioned on the left hand side of the blind. The Twist&Fit cog will be on the right; this side is the side used to tighten the blind in the recess.

Lift the headrail into the recess at an angle, with the plunge end going in first (Fig 1). Gently push the headrail against the side of the recess to compress the plunge end, then slide the twist end (Fig 2) into position. Once you're happy with the placement, keep hold of the blind and twist the cog towards the window to secure it in place.

(Fig 1)

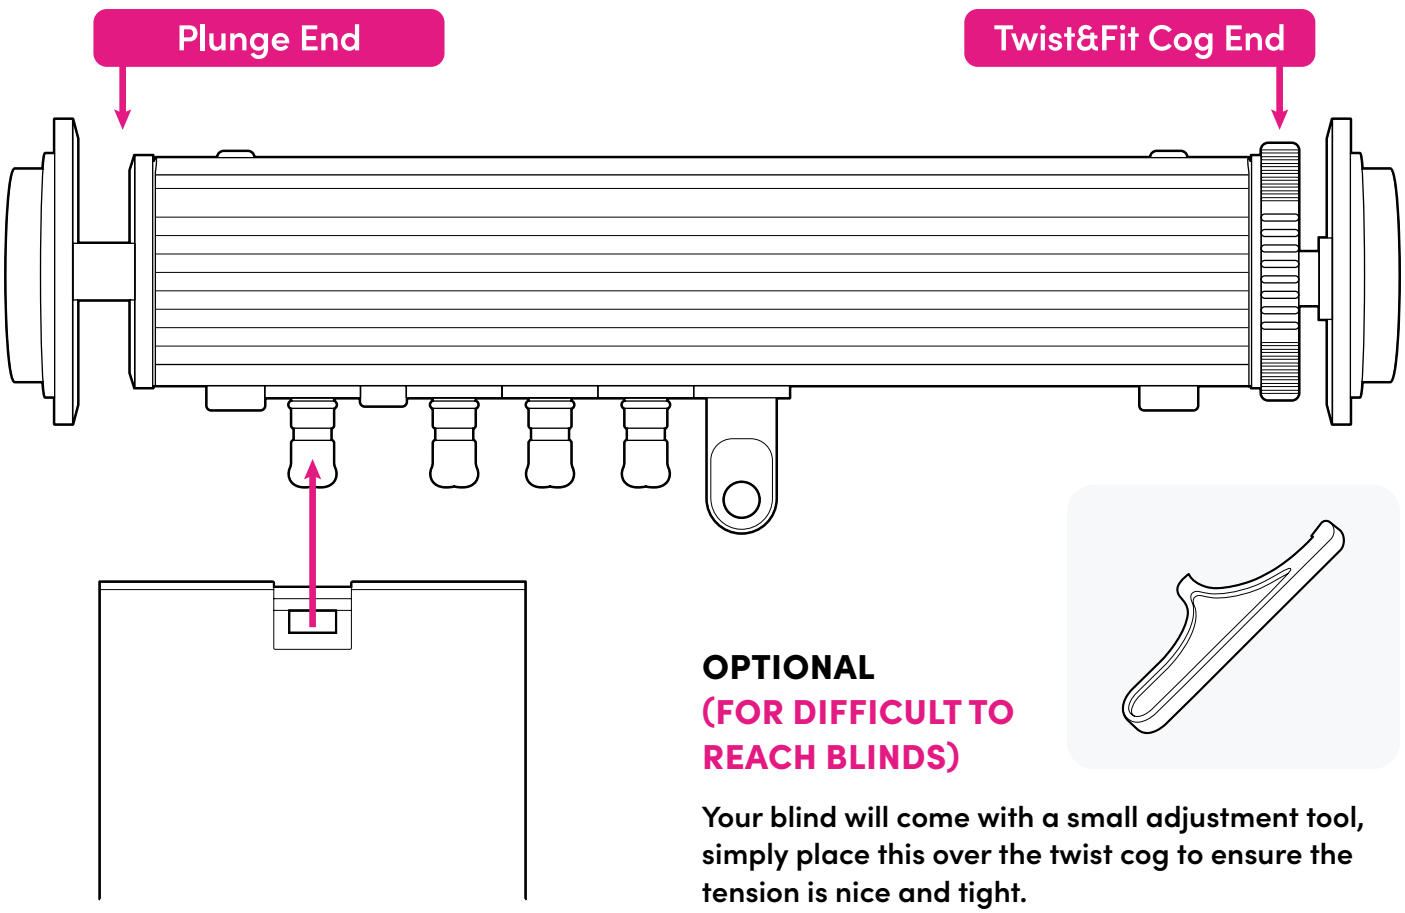

(Fig 2)

OPTIONAL
(FOR DIFFICULT TO REACH BLINDS)

Your blind will come with a small adjustment tool, simply place this over the twist cog to ensure the tension is nice and tight.

STEP 2 - HANG THE SLATS

Unpack your vertical blind slats and hook them onto the runners under the headrail.

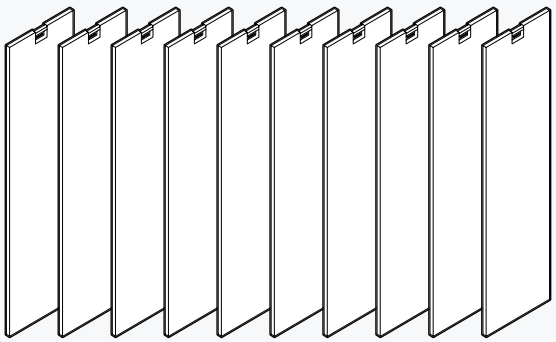

STEP 3 - FIT THE CHAINS

Use the connector clips to attach the chain to the pre-installed weights at the bottom of each slat.

The chain may arrive as one long piece. Simply cut it where the slats separate (for a split stack) or at the end of the blind (for a left or right stack), so each group of slats has its own chain.

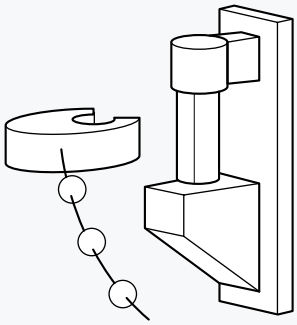

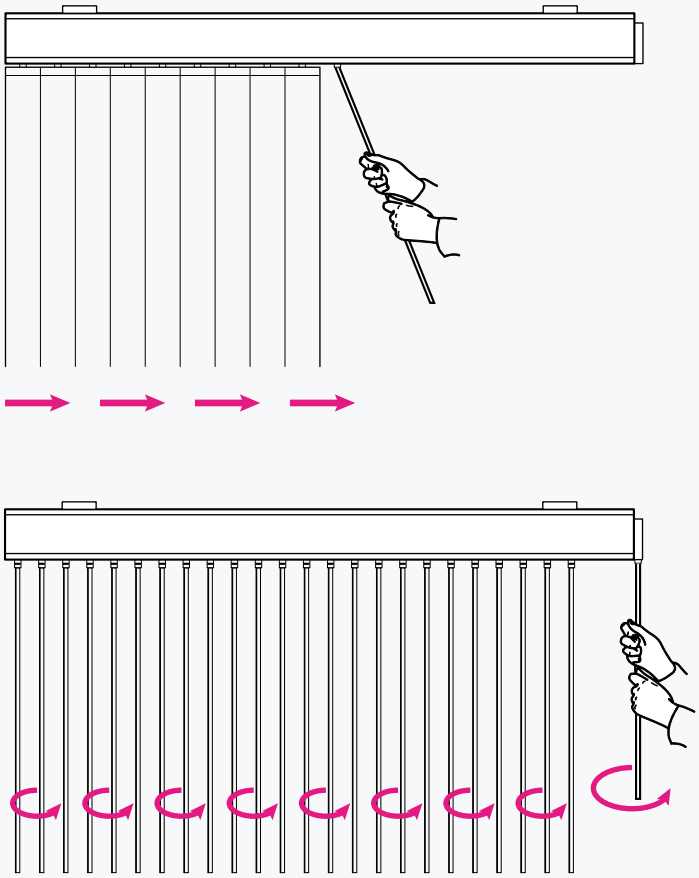

STEP 4 - ATTACH THE CONTROL WAND

Your Twist&Fit Vertical Blinds come with a rod which can be used to both draw and tilt the blind slats. Simply loop this through the rod hook on the headrail.

For a left- or right- bunch, the rod sits at the front of the slat stack and is pulled across the window to open or close the blinds.

For a split bunch, the slats will open to both sides of the window, and the rod will always be positioned on the right hand side.

To tilt the slats, simply twist the rod.

HOW TO RELEASE THE BLIND

To take your Twist&Fit Vertical Blind down, whilst gripping the headrail, twist the cog away from the window to release the tension, gently press into the plunge end and remove the blind.

NOTE: If your window is exposed to high humidity or direct sunlight, occasional adjustments to the twist tension may be necessary throughout the year.

CHILD SAFETY



WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children.

Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.