

247blinds

FLY SCREENS

LET'S GET

MEASURING!




MEASURING FOR FLY SCREENS

What you'll need: A metal tape measure and a pen/pencil

Fly Screens are designed to sit snug inside your window recess to keep unwanted visitors out, so they are only suitable for recess fitting.

Make sure there's enough space for your blind to fit inside the recess (considering any window handles) - you'll need at least **38mm** of depth to fit a fly screen to a recess of 1500mm width x 1600mm depth or less. For bigger sizes, you'll need at least **48mm** of recess depth.

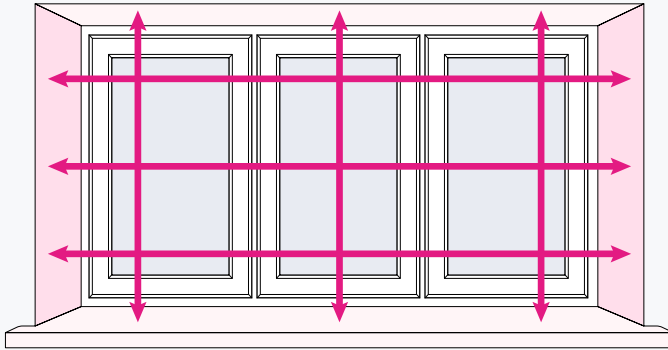

STEP 1 - MEASURING WIDTH

Take **3 measurements** across the width of the top, middle and bottom of the recess. The **smallest** measurement will be your blind width.

STEP 2 - MEASURING DROP

Take **3 measurements** from the top down, along the left, middle and right of the recess. The **smallest** measurement will be your blind drop.

Be aware that some obstructions may mean fly screens are not suitable, such as:

- Sloped walls or sills
- Obstructions inside the recess like picture rails or part-tiled walls

Need some help? We're here—call us on **01484 443790**

