

247blinds

ROMAN BLINDS

LET'S GET

MEASURING!



MEASURING FOR ROMAN BLINDS


How do you want the blind to sit against your window?

INSIDE RECESS (We call this **RECESS MEASUREMENT**): If you want your blinds to mount inside a window recess, this is the option for you. Most people choose this style.

OUTSIDE RECESS (We call this **EXACT MEASUREMENT**): If you want your blinds to cover the whole window recess, or if your windows are flush with the wall, this is the option for you.

NOTE: Roman blinds have a minimum stack height (this is the height the blind takes up when fully open) of 20cm at the smallest size of 40cm width & drop. This size can vary on the chosen blind and lining fabric. For an accurate stack measurement for your sizes, please contact our customer service team for more information.

INSIDE RECESS (RECESS)

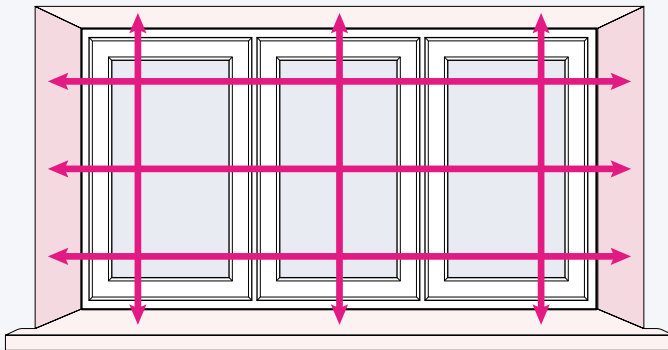

STEP 1 - MEASURING WIDTH


Take **3 measurements** across the width of the top, middle and bottom of the recess. The **smallest** measurement will be your blind width. (We will make your blind 5mm narrower for a snug fit.)

STEP 2 - MEASURING DROP

Take **3 measurements** from the top down, along the left, middle and right of the recess. The **smallest** measurement will be your blind drop.

THAT'S IT! These 2 measurements are all you need for ordering an inside recess blind.

OUTSIDE RECESS (EXACT)

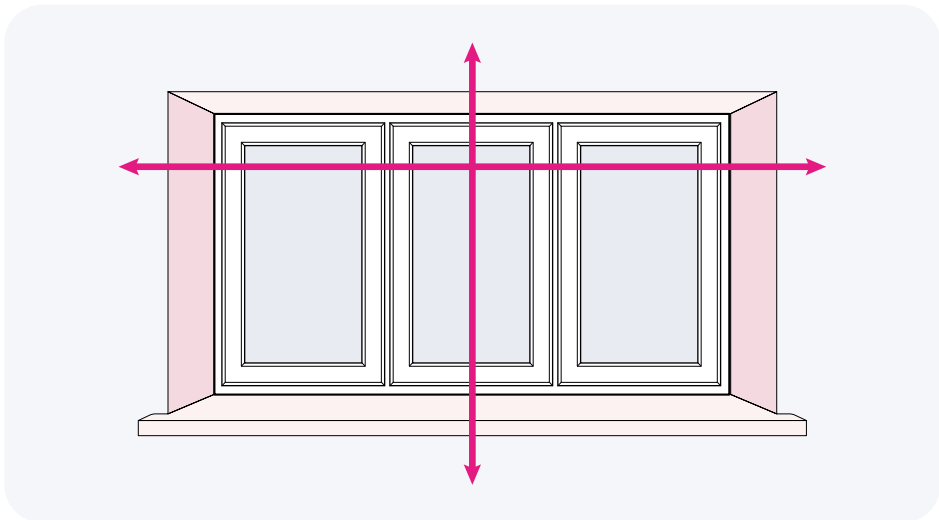

TIP: For the best results allow your blind to overlap the edges of the recess by at least 50mm on each side - ensuring that you have enough space to accommodate the suggested overlap.

STEP 1 - MEASURING WIDTH

Measure outside the recess from one side to the other, starting and finishing where you want the edges of your blind. This will be your blind width.

STEP 2 - MEASURING DROP

Measure from top to bottom, starting where you want the rail to be and ending where you want the bottom of your blind to be. This will be your blind drop.

THAT'S IT! These 2 measurements are all you need for ordering an outside recess blind.

