

24/7blinds



STICKFITSLIM

BLIND


MEASURING GUIDE



YOU WILL NEED: A METAL TAPE MEASURE AND A PEN/PENCIL




NOTE: Stick Fit Slim blinds project a maximum of 25mm from the glass to the front of the handle. When measuring for bifold doors, please take into account the projection of the blind to ensure you are still able to collapse your bifold doors.

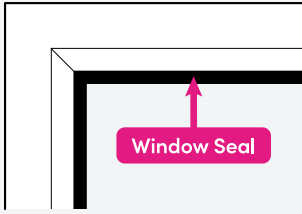

To ensure the best fit possible, we require accurate measurements for both the width and drop of the blind to the nearest millimetre.


To do this, measure the full size of the visible glass - this is the glass you can see between the window seal (also known as the window beading or gasket seal). Use this measurement when ordering.

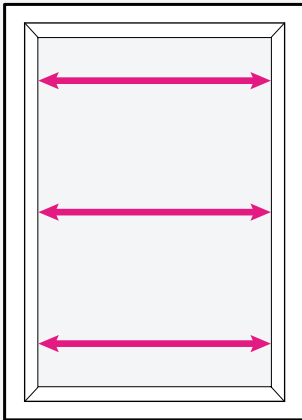

STEP 1 - MEASURING WIDTH

Take three measurements of the window width (see example) – across the **top**, **middle**, and **bottom**.

If there is any variation in the measurements, always use the shortest width. If you have particularly large windows, you can take intermediate measurements to check.

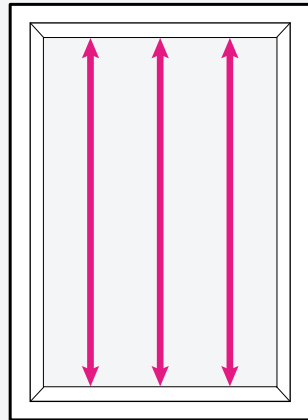

STEP 2 - MEASURING DROP

Take three measurements of the window drop length (see example)

If there are any variations, use the shortest measurement.

NOTE: Please make sure to take at least three width and drop measurements across the span of the window to check that there is no more than a **4mm difference** between each measurement. If so, please contact us so we can ensure you have the best possible fit for your new blind!

MAKE A NOTE OF YOUR MEASUREMENTS

Other Notes

247blinds.co.uk



ALL MEASURED UP?

Placing your order couldn't be easier.
Scan here to be taken to our website.

or call 01484 443790



FAST TRACK
DELIVERY



5 YEAR
GUARANTEE

BE INSPIRED



247 Home Furnishings Ltd trading as 247Blinds
Unit A, Trident Business Park, Huddersfield, HD2 1UA