

247blinds

TWIST&FIT BLINDS

Roller and Roman

LET'S GET

MEASURING!




MEASURING FOR TWIST&FIT BLINDS

Using a metal tape measure and a pen/pencil, follow our simple step-by-step guide.

THIS MEASURING GUIDE IS SUITABLE FOR:




ROLLER BLINDS

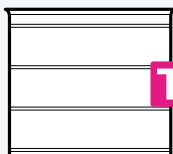

ROMAN BLINDS

We recommend measuring where your blind will be installed within the window opening, this is usually as close to the window glass as possible. This ensures the best possible fit - especially for older homes with uneven walls.

TIP: When measuring, be aware of anything that may get in the way. If you have tiling or picture rails around the bottom of your recess, which is 20mm or less difference to the width across the top, you must provide the measurement where you intend to fit the blind for a nice, snug fit!

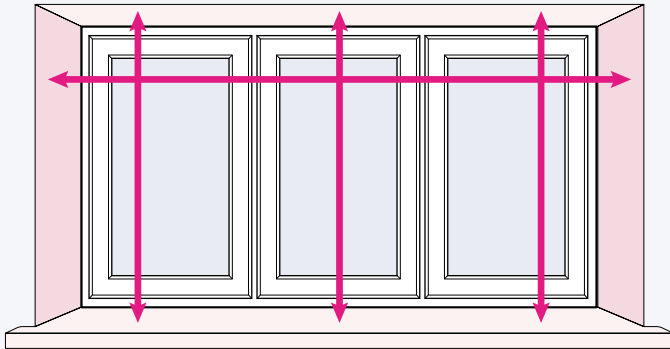

STEP 1 - MEASURING WIDTH

Measure the width at the top of the recess. This will be your blind width.

STEP 2 - MEASURING DROP

Take **3 measurements** from the top down, along the left, middle and right of the recess. The **smallest** measurement will be your blind drop.

THAT'S IT! These 2 measurements are all you need for ordering this blind.

