247blinds

TWIST&FIT
DAY & NIGHT BLIND

LET'S GET MEASURING!

MEASURING FOR TWIST&FIT DAY & NIGHT BLINDS

Using a metal tape measure and a pen/pencil, follow our simple step-by-step guide.

Measure the area where your blind will be installed within the window opening, this is usually as close to the window glass as possible. Ensure you measure to the nearest mm.

TIP: When measuring, be aware of anything that may get in the way. This product is not recommended for uneven or tiled walls.

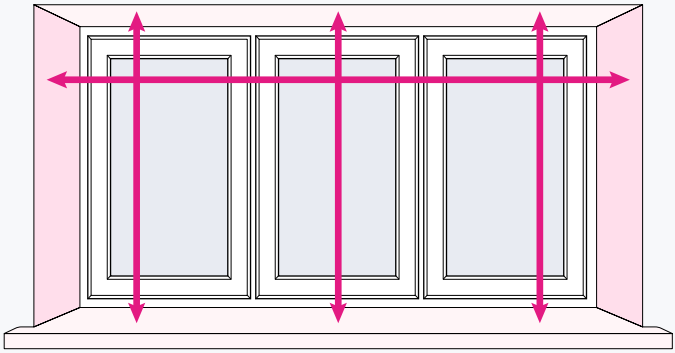

STEP 1 - MEASURING WIDTH

Measure the width at the top of the recess. This will be your blind width.

STEP 2 - MEASURING DROP

Take 3 measurements from the top down, along the left, middle and right of the recess. The smallest measurement will be your blind drop.

THAT'S IT! These 2 measurements are all you need for ordering this blind.

MAKE A NOTE OF YOUR MEASUREMENTS

Blind/Colour/Location	Width	Drop

Other Notes

247blinds.co.uk

All measured up?

Placing your order couldn't be easier.
Scan here to be taken to our website.

or call 01484 443790

EASY TO FIT

FAST TRACK DELIVERY

5 YEAR GUARANTEE

Be inspired

247 Home Furnishings Ltd trading as 247Blinds
Unit A, Trident Business Park, Huddersfield, HD2 1UA.