

## Fitting instructions – Neat Fit blinds

### Checking Your Window is suitable:

**Please note:** Our Neat Fit blinds are only suitable for UPVC windows with a rubber gasket holding the glass in place. When testing if your window is compatible please use a butter knife to perform the test. The thickness of the knife will mimic the thickness of the bracket we use with this style.



To ensure that your window is suitable, slide a butter knife into your rubber gasket and push it as far as it will go. To help the knife ease in, you can use washing up liquid or furniture polish.



Mark the distance the blade travels under the gasket.



Measure this distance and if it is **at least** 10mm, your window can accommodate our conservatory blinds.

## Fitting Your Blinds:



To fit the blind, slip the tab on the top rail of the blind in between the glass and the rubber gasket. Again, you can use washing up liquid or furniture polish to make the procedure easier and to avoid damaging your window.



Push the tab of the top rail up on the other side.



Repeat this with the tab on the left and right of the bottom rail.



The blind is supplied pre-tensioned by the factory, so is ready to use and enjoy straight away.


**Using the Packers:**

Over time you may find that your rubber seal has loosened slightly which may cause the blind to lose some of the tension holding it in place.

Whilst this is not very common, all our Neat Fit blinds are supplied with bracket packers which can be used to help hold the blind tight to the window to achieve a more secure fit, should this begin to happen.

In your pack you will have received some brackets (A) and bracket packers (B). You will have already used the brackets during fitting the blind.

Packers are usually used if the rubber seal becomes loose so it may be that you only need to pack out 1 or 2 brackets or more.

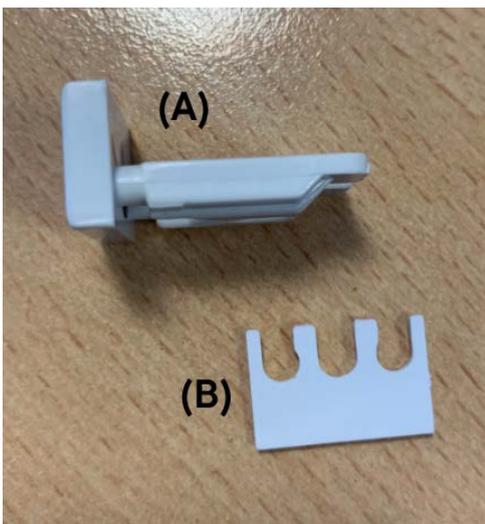

All you need to do is pull the bracket (A) from the head rail slightly and insert the packer (B) as below.

If you are packing the top left and top right, the bracket packer must be inserted from below.

If you are packing the bottom left or bottom right, the packer is to be inserted from above.

You can use more than one packer if needed but once in place, this will tighten and secure the blind back in to the window frame.

