


## **Perfect Fit - Pleated, Honeycomb & Venetian Fitting Instructions:**

To assemble your Perfect Fit blind, there is a simple assembly procedure to follow before fitting may commence.



1. Carefully unwrap the blind components. Unravel all guides and control cords. The blind will have the top and bottom parts of the frame attached with a cord.

Lay out the blind face down on a clean, even surface.

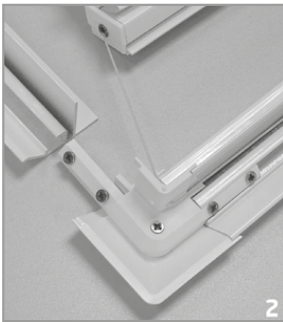


2. To build the frame, select the left-hand frame component and guide onto the exposed arm of the bottom left corner joint.



3. Slide the frame onto the arm until secure. Repeat the process on the top left-hand corner joint.

Now follow the same procedure for the right-hand side of the frame. Once the structure is complete, tighten the securing screws attached to each corner joint.

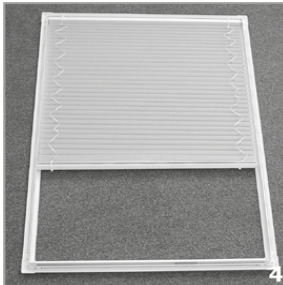

4. Your Perfect Fit blind is now ready to be fitted.

## **Fitting the frame:**

To find the correct position to fit your brackets, (85mm from beading) lay a credit card in the corner of the window to locate the bracket position for each corner.

We recommend using a lubricant in the form of washing up liquid on the base of each bracket to help slot the bracket into place.

On each corner of the glass line up the bracket with the base of the credit card and fit the bracket by firmly pushing it between the glass and rubber seal of the window.

Repeat for all four corners of the window, and intermediate brackets (if required) then clean excess lubricant before fitting the frame.

Line up bracket with the edge of a credit card

