

247blinds

STICKFITLite

FITTING GUIDE

 Fitting Time: Approx. 3 mins

 **WARNING:** PLEASE READ INSTRUCTIONS THOROUGHLY BEFORE OPERATING THIS PRODUCT



THE INSTALLATION OF THIS PRODUCT SHOULD BE
CONDUCTED BY SOMEONE COMPETENT IN DIY.


IMPORTANT: STICKFITLite HONEYCOMB ONLY

The top rail of your **STICKFITLite** Honeycomb Blind includes a small **light-blocking lip**. This is designed to tuck slightly underneath the window's rubber seal to help reduce light coming in at the top.

Before installing, please check:

- There is at least **8mm of space underneath the rubber seal**. You can gently test this by sliding something thin (like a blunt knife or a card) under the seal and measuring the gap.
- The **rubber seal is soft and flexible**, so it can be gently pressed in.

Please refer to our measuring guide for more information.

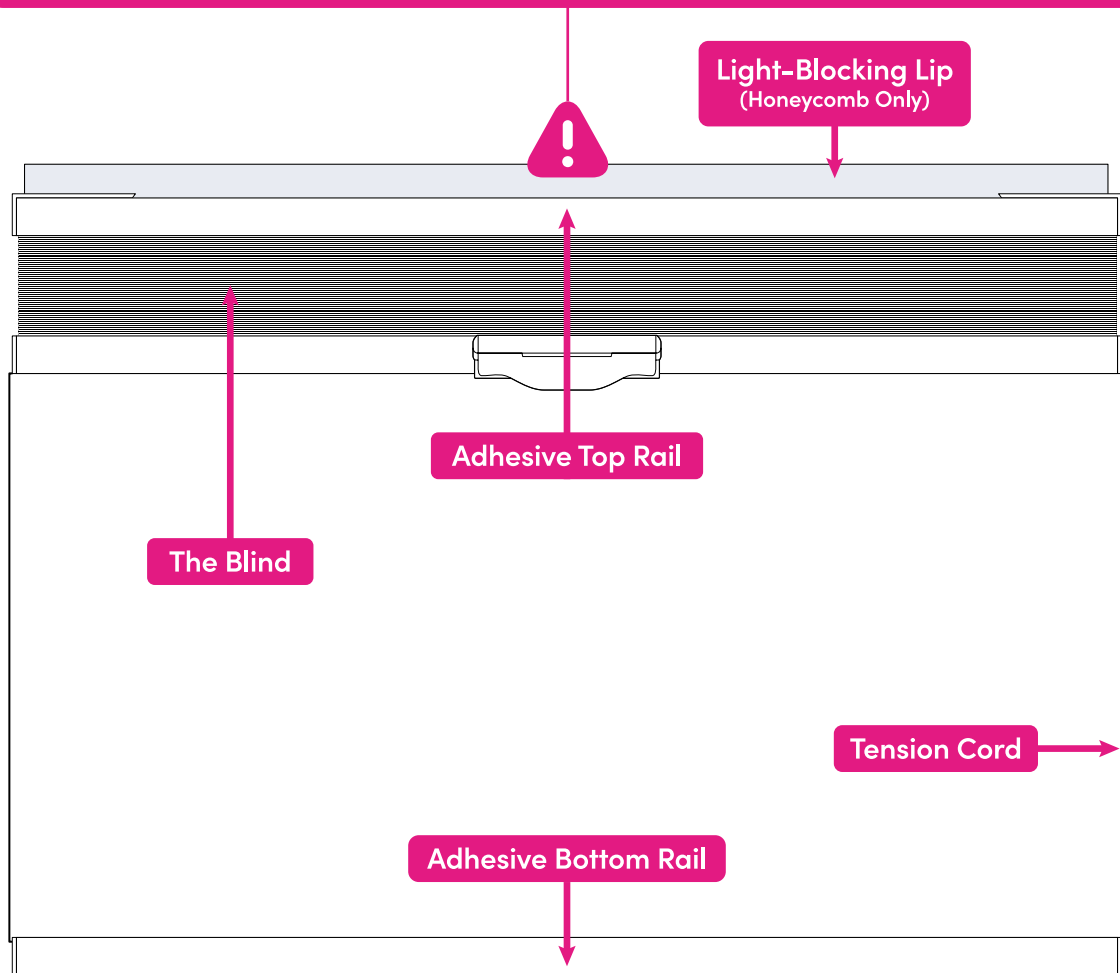




PREPARE THE WINDOW

Thoroughly clean the glass where the rails will be fitted – both at the top and bottom of the visible glass area.

Ensure the surface is completely dry before installation, as the adhesive will not bond correctly to dusty or damp glass.

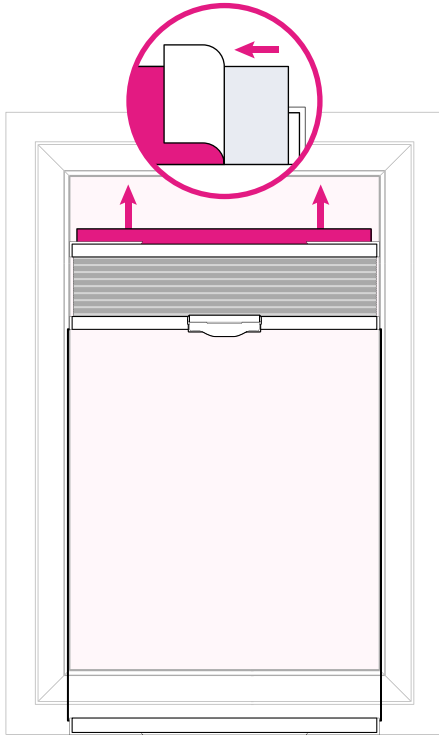

STEP 1 – FITTING THE TOP RAIL

Peel the adhesive backing from the **top rail** (with the light-blocking lip) and position it at the **top edge of the visible glass**.

The rail should sit flush with the edge of the rubber seal (if visible), or flush with the edge of the frame if the seal is not visible.

STICKFITLite HONEYCOMB ONLY


As you press the rail into place, gently push the light-blocking lip underneath the rubber seal. The seal should compress slightly to allow the lip to slide underneath.


Press firmly along the full length of the rail and hold for several seconds to secure it. The blind will now hang suspended from the top rail.

STEP 2 – FITTING THE BOTTOM RAIL

Gently pull the bottom rail downwards to stretch the cords and peel the adhesive backing from the bottom rail. Carefully align it with the bottom edge of the visible glass and press firmly along the full length to secure in place.

The blind is now fully installed.

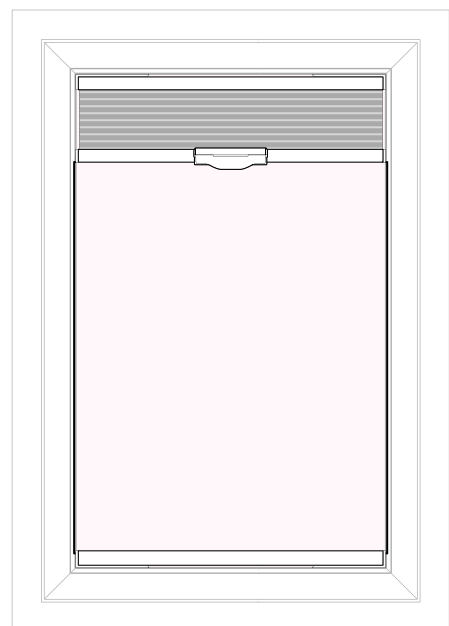

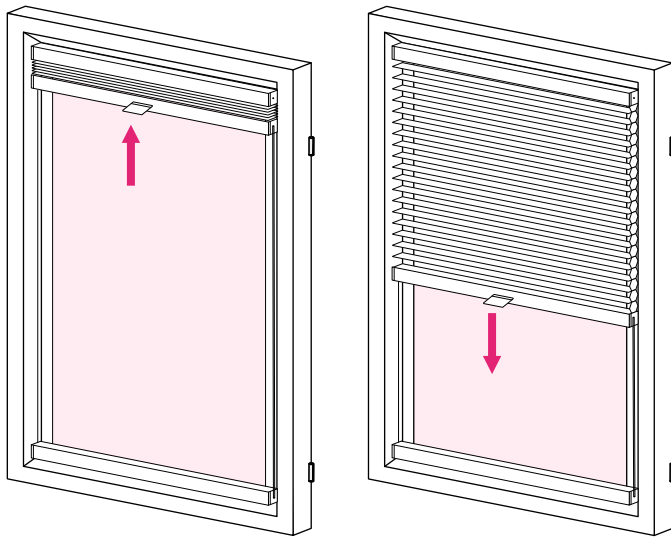


STEP 3 – OPERATING THE BLIND



To raise and lower the blinds, simply pull lightly up and down using the handle.

The handles fold away for a sleek, compact profile, making it ideal for bi-fold doors.

FOR VENETIAN STICKFITLite BLINDS ONLY

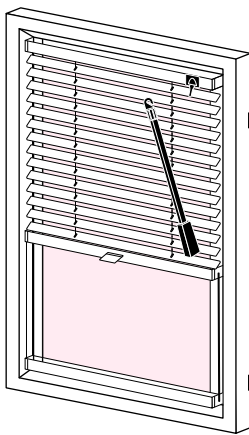


Attach the plastic wand by hooking the wand onto the tilt mechanism on the Venetian Blind.

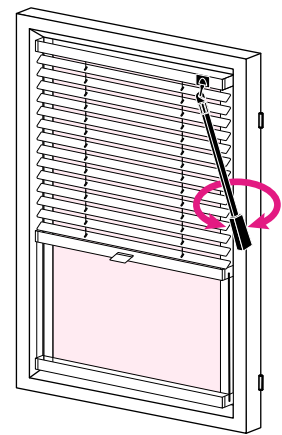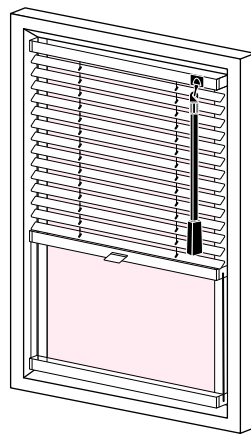

Simply twist the wand to open and close the slats.

OPTIONAL – ADJUSTING THE CORD TENSION

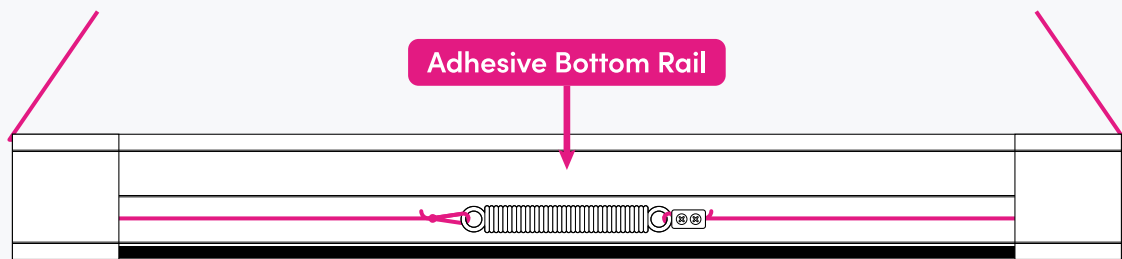


If the blind does not stay in position when fully raised and begins to slip down, the cord tension may need adjusting.

To adjust:

- Carefully pull the spring out from underneath the bottom rail. Do not use scissors for this step.
- One cord end is secured by a holding screw. Loosen the screw slightly while holding the cords.
- Pull approximately 10mm of cord through (away from the spring) to increase tension.
- Tighten the screw securely.
- Test the blind and repeat small adjustments if required.

Once correct, tuck the spring and cords neatly back behind the rail.

CHILD SAFETY

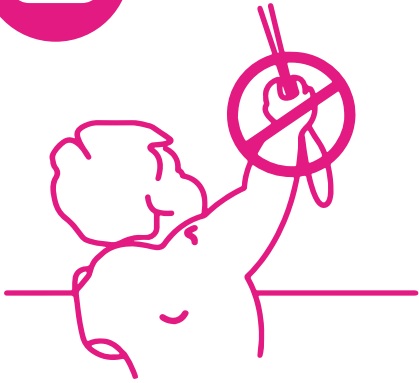

WARNING

STICKFITLite Blinds are cordless to operate and child safe by design.

However:

- Ensure beds, cots and furniture are positioned away from windows.
- If the blind is pulled away from the glass, check for damage before refitting.

If removed, simply reinstall following the steps above.